




scatter face assembly guide

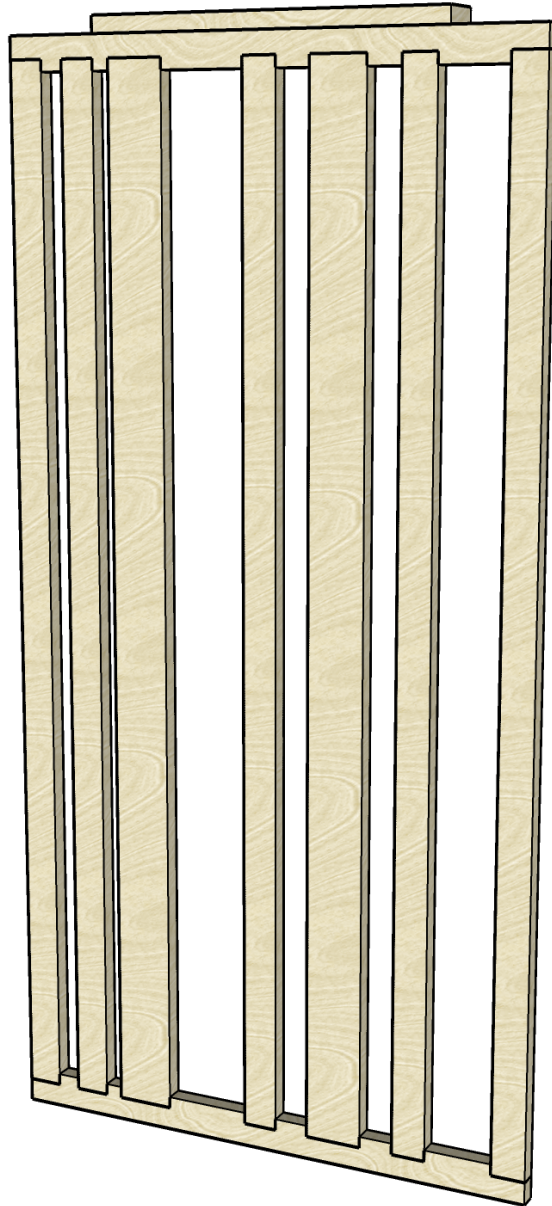


components

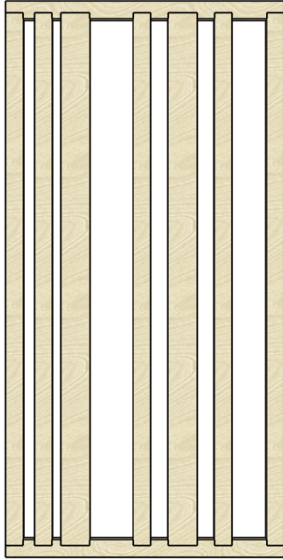

scatter face

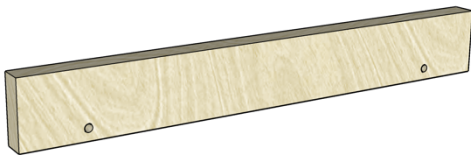


cleat

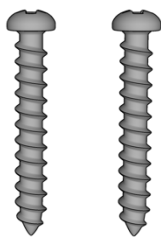

1 1/4" screws x2


required tools

1. screwdriver or drill
2. seriously, that is it!

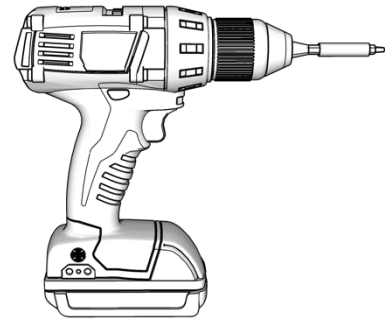


step 1 – screw the cleat to the scatter face

- a. all pieces are predrilled and labeled with their corresponding part. match the labels then screw together

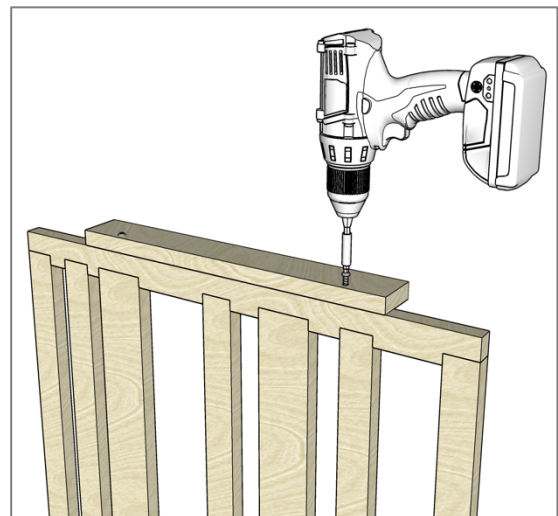

step 2 – place the scatter face on an acoustic panel

a. set the cleat on top of the panel

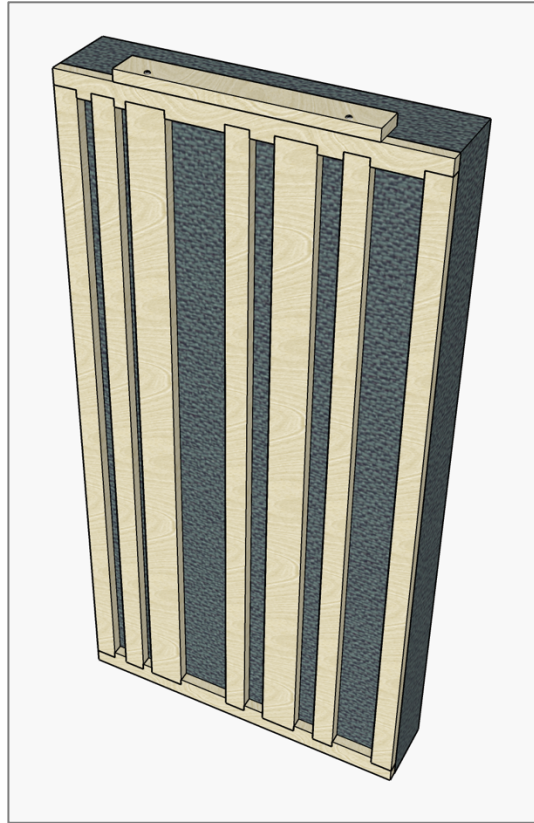

congrats, you did it!

we'd love to see pictures of your newly updated studio. if you
have any photos to share email them to
graham@musiccityacoustics.com